

Long Range Precision Bracket Assembly Guide



Unboxing

Once opening the box you will find...


- 1 L-Bracket
- 1 Adjustment Assembly
- 1 Pole Bracket
- 4 15mm M8 Bolts with flat and split lock washer
- 3 25mm M8 Bolts with flat and split lock washer
- 1 40mm M8 Bolts with flat and split lock washer
- 4 120mm M8 Bolts with Lock nut

Tools/Items Required


- 13mm Wrench

For helpful training and user case information
please go to ignitenet.com/support

Assembly

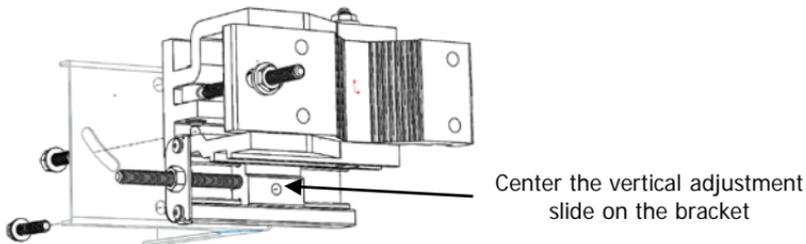


Attach 3 – 25mm M8 Bolts with flat and split lock washers to between the L-Bracket and Adjustment Assembly

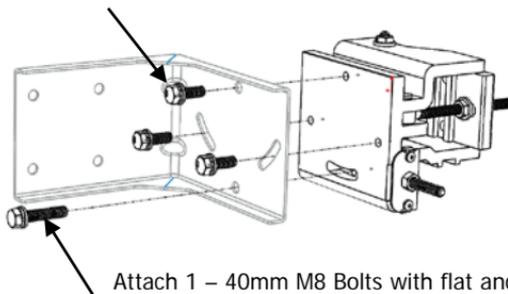


Attach 1 – 40mm M8 Bolts with flat and split lock washers to between the L-Bracket and Adjustment Assembly

Attach Pole Bracket

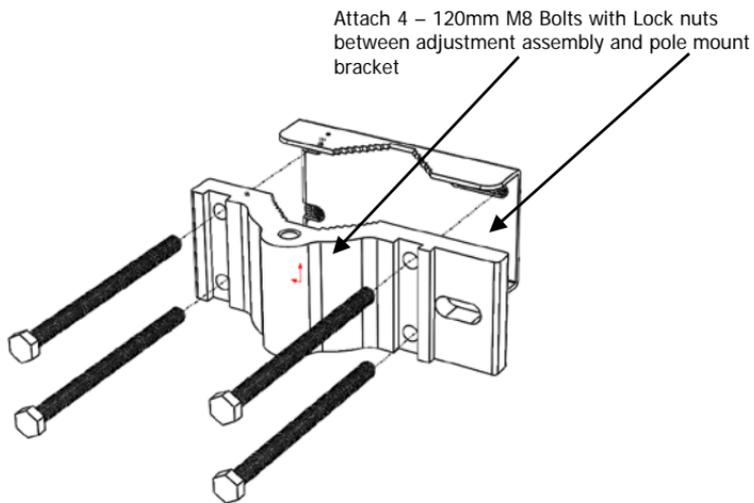


Attach MetroLinq

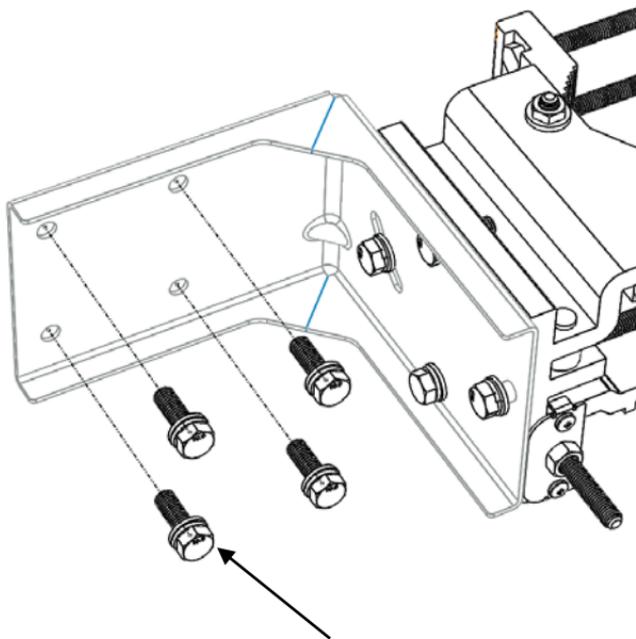

Attach 4 – 15mm M8 Bolts with flat and split lock washers to your MetroLinq unit

Aiming

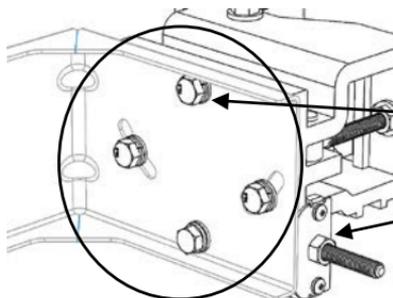


Vertical –

Loosen 4 locking bolts

Adjust vertical aiming nut

After aiming tighten all 4 locking bolts.

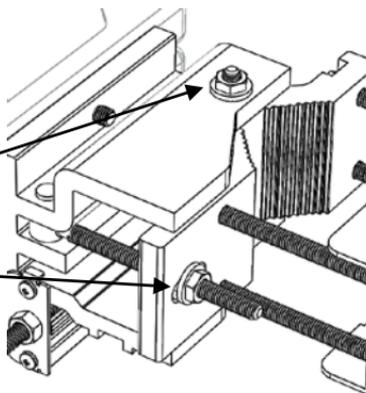

Horizontal –

Loosen Horizontal Locking Bolt

Adjust nuts on horizontal adjustment bolt

After aiming tighten all nuts.